



# TDK Life on Record A26 Front Faceplate Replacement

The front faceplate is dented and needs to be fixed or replaced. This guide will help remove the faceplate.

Written By: Elise Howard





## TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Front Faceplate



- Obtain the black plastic spudger to remove the faceplate.
- Insert the pointed end of the tool inside one of the holes on the faceplate itself.
  - ❗ The corner is the best place to start.
  - ❗ The faceplate has many little holes so choose one that makes it easier for you.

## Step 2



- Gently start to lift until the faceplate starts to rise.
  - ❗ If you are having trouble getting the faceplate off, continue trying on the rest of the corners until fully removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 11:24:26 AM.